


PARTS MANUAL

Serial Number 210001 & up

WX470 SKID STEER-MOUNTED LOG SPLITTER

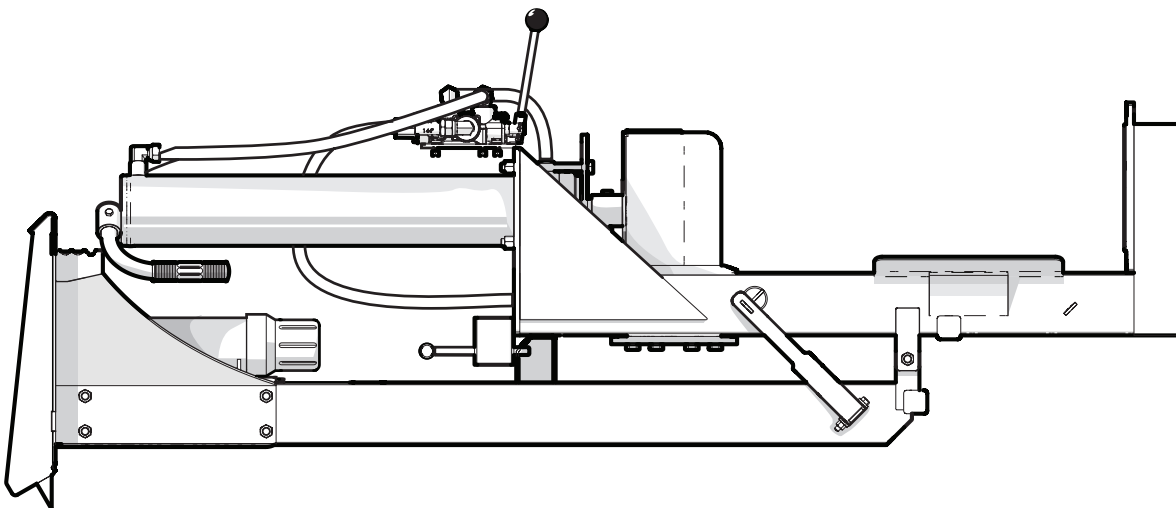

Foreword

This Wallenstein parts manual is prepared to assist customers in ordering quality OEM replacement parts.

Regular maintenance combined with replacing old, worn or broken parts with the correct OEM parts is essential in prolonging the life of your Wallenstein product. Refer to this manual to identify replacement parts.

To order parts, contact your Wallenstein dealer or distributor. Have the product model and serial number handy.

If your dealer is no longer available, please go to our website: <http://wallensteinequipment.com> and click on the [Dealer Locator](#) to find the nearest dealer.

All information contained in this parts manual is current as per the revision date at the bottom of the page. Wallenstein reserves the right to change product specifications at any time without notice.

If your product specifications differ from those contained in this manual, contact Wallenstein for current information.

Reproduction of information in this parts manual is prohibited without prior written permission from Wallenstein Equipment Inc.

Wallenstein Equipment Inc. • © 2019

WARNING!

Refer to the operators manual for safe operation and maintenance.

Maintenance should be performed by trained personnel only.


Serial Number Location

Always provide the model and serial number of your Wallenstein product when ordering parts or requesting service or other information. This information is found on the product information plate as shown below.

Record your product information here for future reference.

Model _____

Serial Number _____

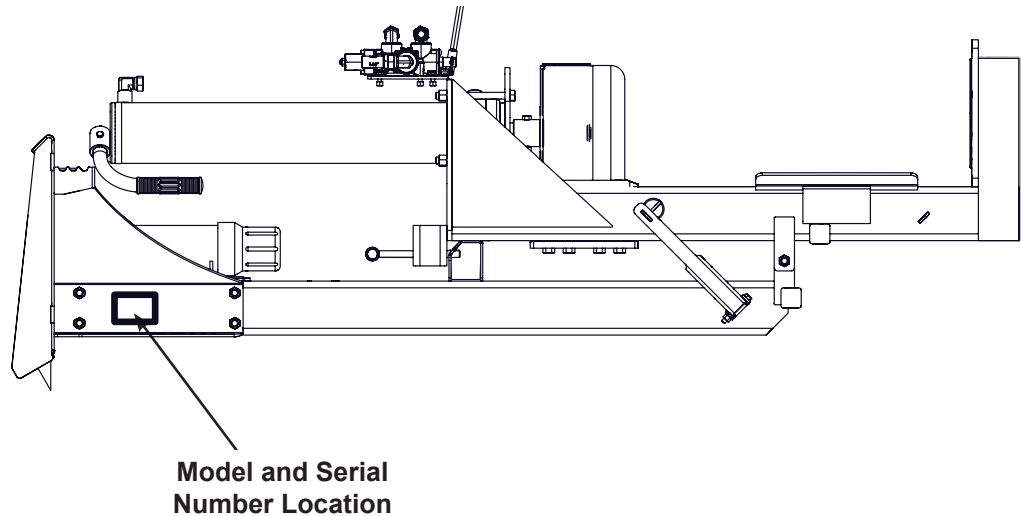


www.wallensteinequipment.com

Contents

Main Parts	4
Valve Assembly	5
Z56209 Service Kit	5
Cylinder Detail	6
Hydraulic Circuit	6
Decal Layout	7
Accessories	8
Common Bolt Torque Values	9
Hydraulic Fitting Torque Values	10

Main Parts

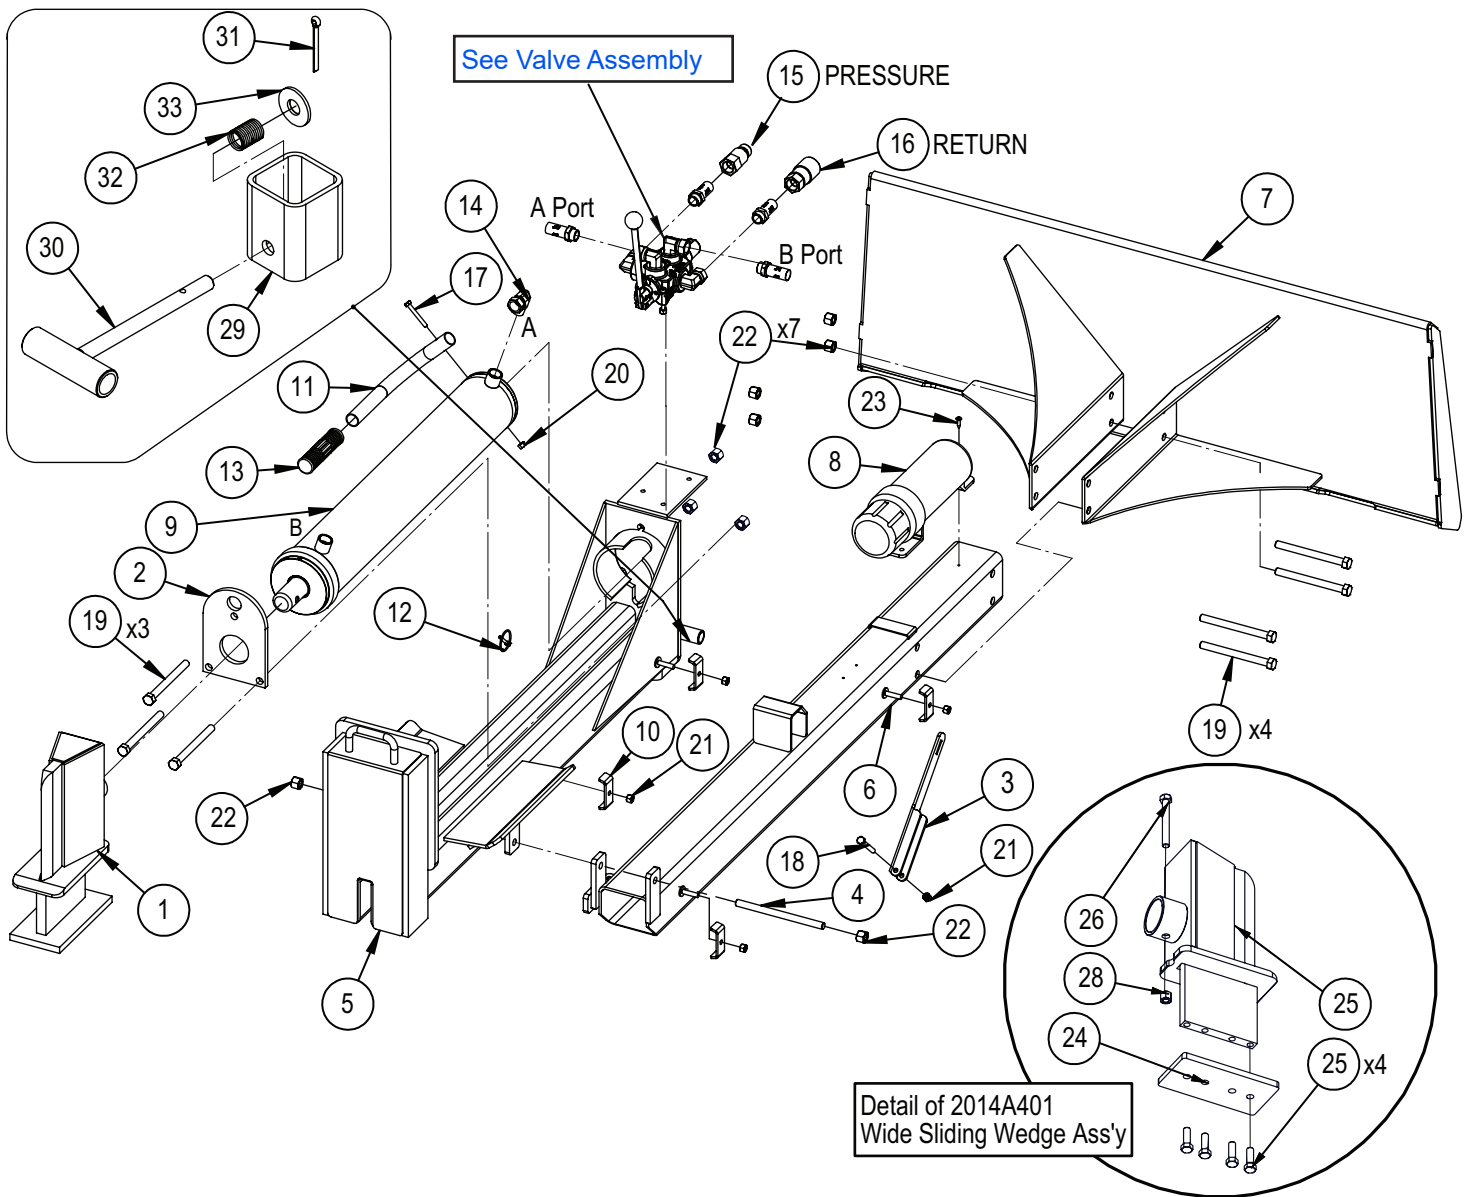


Detail of 2014A401 Wide Sliding Wedge Ass'y

Item No.	Part No.	Description	Qty
1	2014A401	Assembly, Wide Sliding Wedge	1
2	2014S421	Plate, Cylinder Retaining (Bolt)	1
3	2016L002	Locking Latch	1
4	2016M602	Pin, Pivot Threaded	1
5	2016W601	WX370 H/V Base	1
6	2016W605	Main Base, WX370	1
7	2036W605	WX470 Skidsteer Plate	1
8	Z96503	Manual Tube, 3-1/2" Short	1
9	2011C101	Cylinder, 4 x 24 x 1-1/2	1
10	2054L412	Clamp, Two Hose x 1/2"	4
11	2054S414	Handle, Lift	1
12	Z12110	Lynch Pin, 3/16"	1
13	Z19321	Handle Grip, 1"	1
14	Z51331	Elbow 90, MP x FFX 0808	1
15	Z51919	Flat-Face Coupler, FP08 x M ISO 16028	1
16	Z51920	Flat-Face Coupler, FP08 x F ISO 16028	1
17	Z71120	Hex Bolt, 1/4NC x 2"	1


Item No.	Part No.	Description	Qty
18	Z71225	Hex Bolt, 5/16NC x 2-1/2"	1
19	Z71555	Hex Bolt, 1/2NC x 5-1/2"	7
20	Z72211	Hex Lock Nut, 1/4NC	1
21	Z72221	Hex Lock Nut, 5/16NC	5
22	Z72251	Hex Lock Nut, 1/2NC	9
23	Z76721	Self-tapping Screw, 1/4" x 3/4"	1
24	2014S414	Plate, Sliding Wedge Capture	1
25	2014W402	Weldment, Sliding Wedge	1
26	Z71325	Hex Bolt, 3/8NC x 2-1/2"	1
27	Z71576G8	Hex Bolt, 1/2NF x 1-1/2" G8	4
28	Z72231	Hex Lock Nut, 3/8NC	1
29	2016S604	Housing, Latch Spring	1
30	2016W603	Handle, Spring Latch	1
31	Z12321	Cotter Pin, 3/16" x 1-3/4"	1
32	Z32301	Comp Spring, 0.720" OD x 3" x 0.063"	1
33	Z73251	USS Washer, 1/2"	1

Valve Assembly


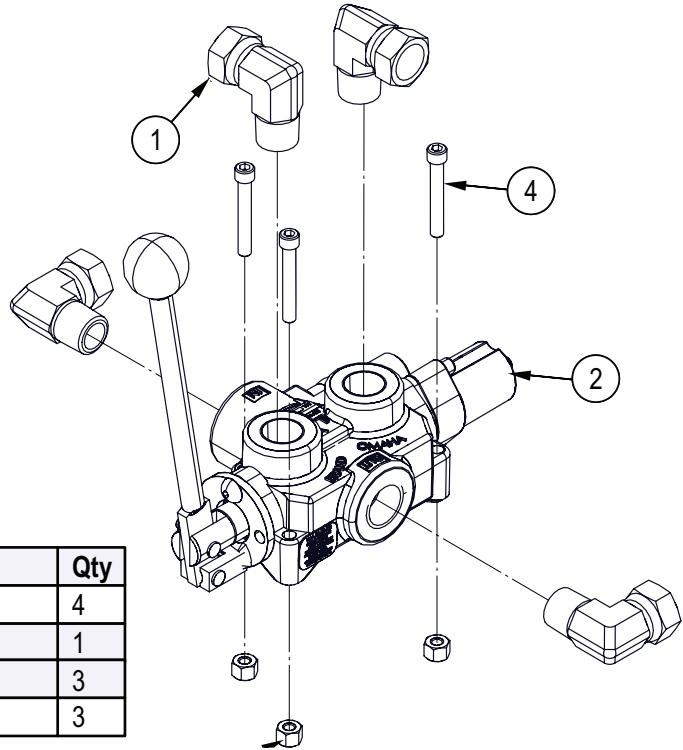


Item No.	Part No.	Description	Qty
1	Z51331	Elbow 90 MP x FPX 0808	4
2	Z56209	Valve, Single Function Detent	1
3	Z72211	Hex Lock Nut, 1/4NC	3
4	Z75114	SHCS, 1/4NC x 1-3/4"	3

Z56209 Service Kit

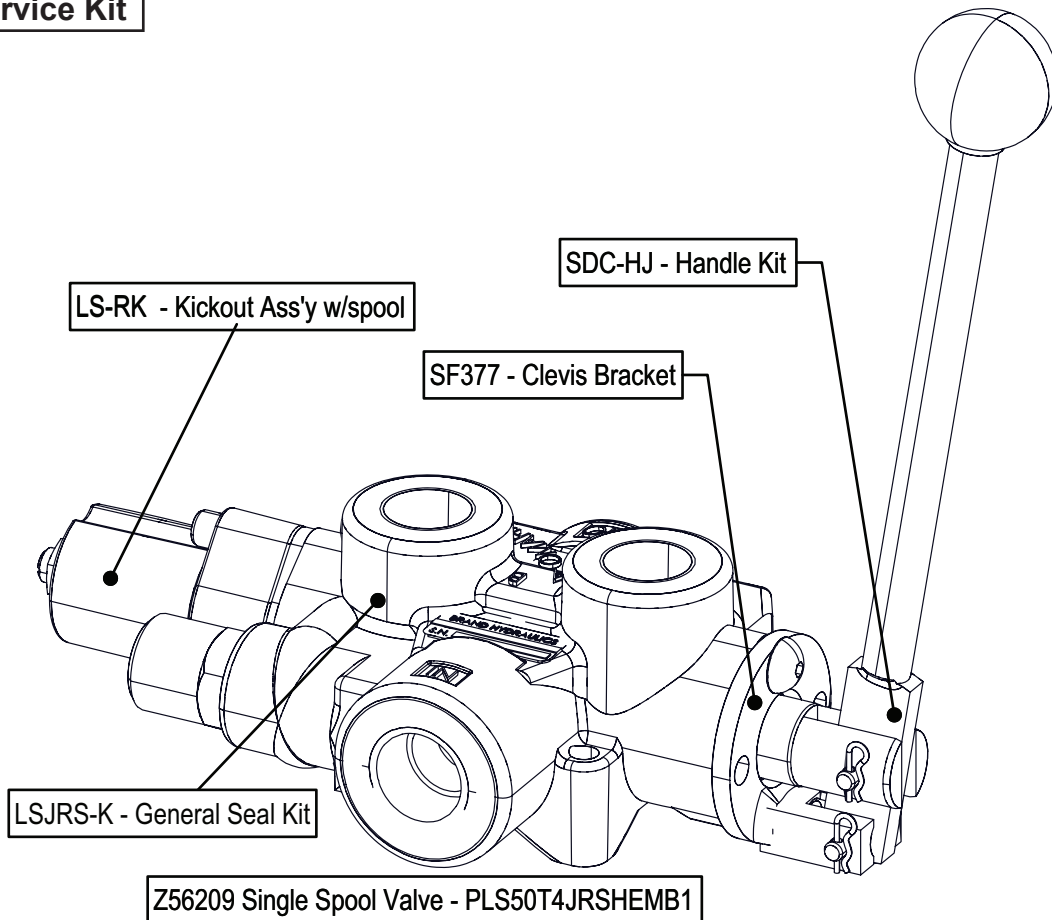


Cylinder Detail

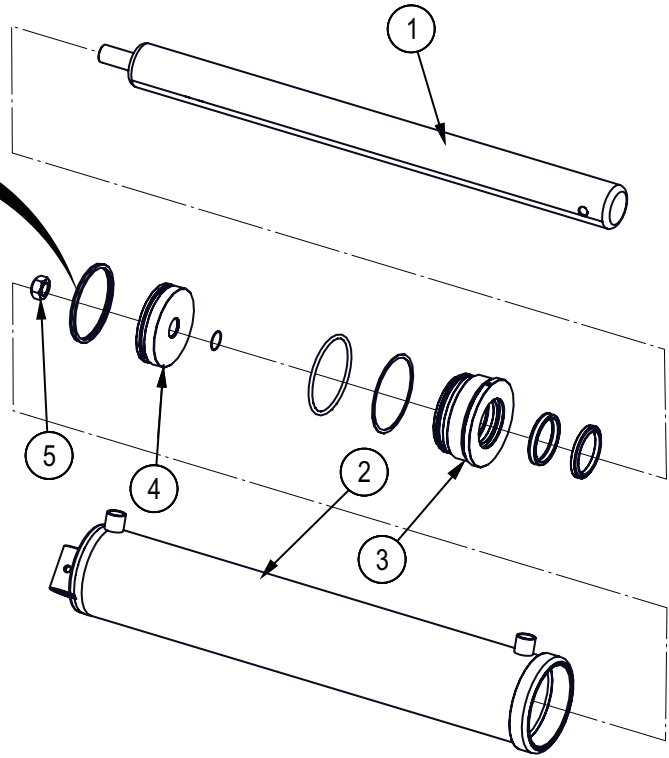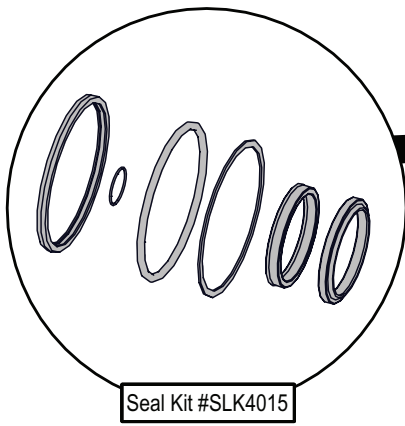

Item No.	Part No.	Description	Qty
1	2011C1012	Rod, 1-1/2 x 1	1
2	2011C1014	Barrel, 4"	1
3	G400-150S	Gland, 4" x 1-1/2"	1
4	P100-400SP	Piston, 4" Bore	1
5	Z72276	Hex Lock Nut, 1NF GR8	1

Hydraulic Circuit

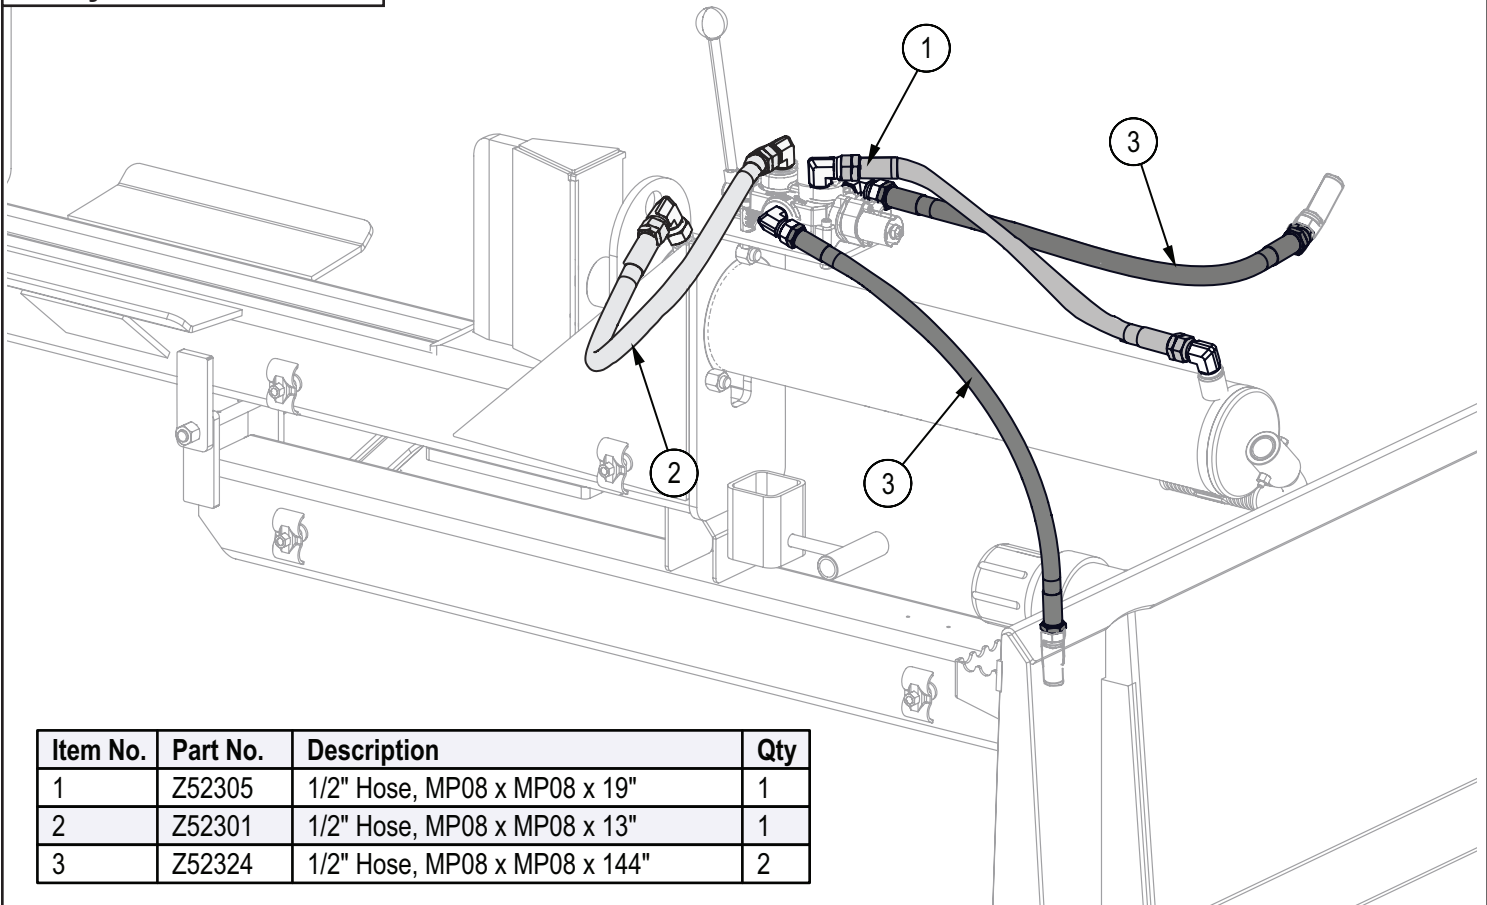


Item No.	Part No.	Description	Qty
1	Z52305	1/2" Hose, MP08 x MP08 x 19"	1
2	Z52301	1/2" Hose, MP08 x MP08 x 13"	1
3	Z52324	1/2" Hose, MP08 x MP08 x 144"	2

Decal Layout


IMPORTANT! If parts are replaced that have safety signs on them, new signs must be applied. Safety signs must always be replaced if they become damaged, are removed, or become illegible.

Safety signs are included in the product decal kit available from your authorized dealer. Decals are not available separately.

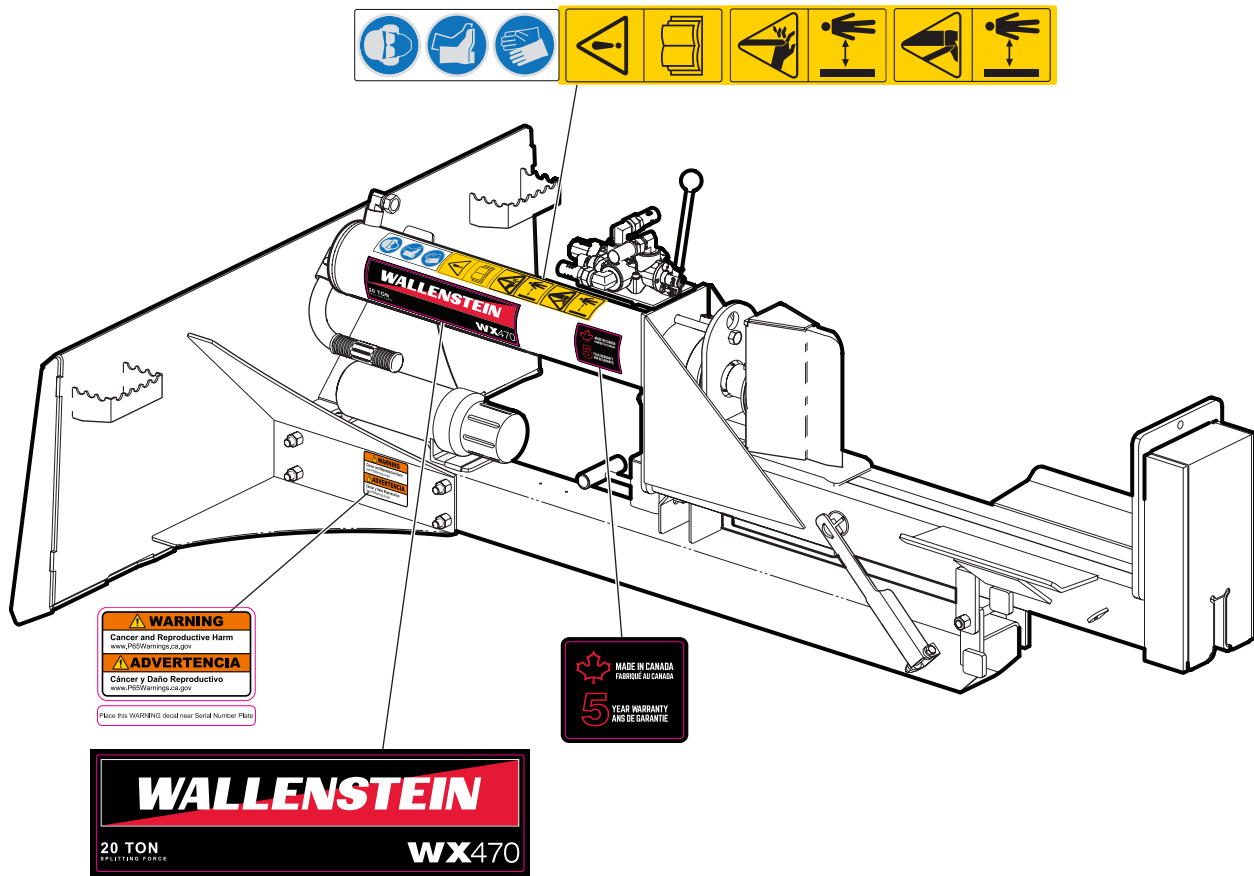


Accessories


Call your dealer for pricing and availability

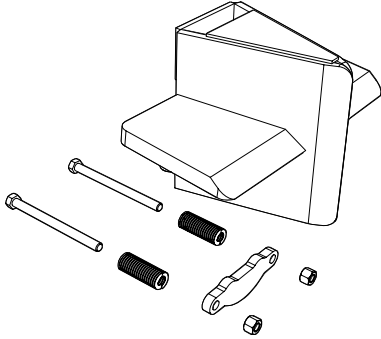**4-way Wedge – P/N 4120**

Boost your productivity and make quick work out of logs by splitting four pieces at once. This is an ideal way to save time.

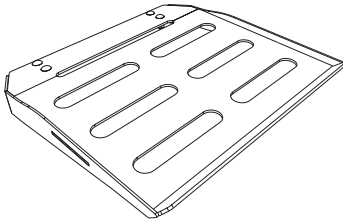**Clamp-on Shelf Extension – P/N 4211**

A great way to add versatility to your splitter.

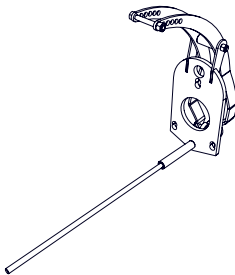**Splitter Stroke Limiter – P/N 4213**

Manually set your return stroke. Great for short pieces, saves time and gets your splitting job done even faster!


Common Bolt Torque Values

Checking Bolt Torque

The tables shown give correct torque values for various bolts and capscrews. Tighten all bolts to the torque values specified in the table, unless indicated otherwise. Check tightness of bolts periodically.

IMPORTANT! If replacing hardware, use fasteners of the same grade.

IMPORTANT! Torque figures indicated in the table are for non-greased or non-oiled threads. Do not grease or oil threads unless indicated otherwise. When using a thread locker, increase torque values by 5%.

 **NOTE:** Bolt grades are identified by their head markings.

Imperial Bolt Torque Specifications

Bolt Diameter	Torque Value					
	SAE Gr. 2		SAE Gr. 5		SAE Gr. 8	
	lbf•ft	N•m	lbf•ft	N•m	lbf•ft	N•m
1/4"	6	8	9	12	12	17
5/16"	10	13	19	25	27	36
3/8"	20	27	33	45	45	63
7/16"	30	41	53	72	75	100
1/2"	45	61	80	110	115	155
9/16"	60	95	115	155	165	220
5/8"	95	128	160	215	220	305
3/4"	165	225	290	390	400	540
7/8"	170	230	420	570	650	880
1"	225	345	630	850	970	1320



SAE Gr. 2



SAE Gr. 5



SAE Gr. 8

Metric Bolt Torque Specifications

Bolt Diameter	Torque Value			
	Gr. 8.8		Gr. 10.9	
	lbf•ft	N•m	lbf•ft	N•m
M3	0.4	0.5	1.3	1.8
M4	2.2	3	3.3	4.5
M6	7	10	11	15
M8	18	25	26	35
M10	37	50	52	70
M12	66	90	92	125
M14	83	112	116	158
M16	166	225	229	310
M20	321	435	450	610
M30	1,103	1 495	1,550	2 100



8.8



10.9

Hydraulic Fitting Torque Values

Tightening Flare Type Tube Fittings

1. Check flare and flare seat for defects that might cause leakage.
2. Align tube with fitting before tightening.
3. Hand-tighten swivel nut until snug.
4. To prevent twisting the tube, use two wrenches. Place one wrench on the connector body and tighten the swivel nut with the second. Torque to values shown.

If a torque wrench is not available, use the FFFT (Flats From Finger Tight) method.

Hydraulic Fitting Torque					
Tube Size OD	Hex Size Across Flats	Torque value		Flats From Finger Tight	
		lbf•ft	N•m	Flats	Turns
3/16	7/16	6	8	2	1/6
1/4	9/16	11–12	15–17	2	1/6
5/16	5/8	14–16	19–22	2	1/6
3/8	11/16	20–22	27–30	1-1/4	1/6
1/2	7/8	44–48	59–65	1	1/6
5/8	1	50–58	68–79	1	1/6
3/4	1-1/4	79–88	107–119	1	1/8
1	1-5/8	117–125	158–170	1	1/8

Values shown are for non-lubricated connections.